monklights

Assembly Instructions

Lamp type: Pendant



This is what the lamp looks like when removed from the package.



Please unscrew the two screws that are on the sides of the wooden box.



[/]Please pull out the aluminum mounting rail from a wooden case.




4

2


3

[/] Then, with the help of steel lines, connect the wooden lamp with a wooden case. The end of the cord is attached to the lamp, just screw it in.

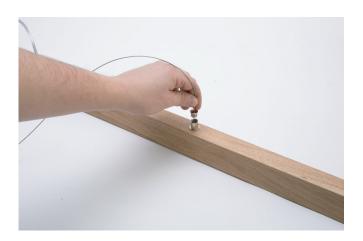

⁷ Once the end of the steel cable is screwed on, put it through the metal part (indicated by the arrow in the photo).


There, on the side, is a hole through which the cord must pass. Pull it out as much as you need. You can cut off the cord sticking out of the side. Until you do this, you can still adjust the length by pressing the end of the metal part with your finger. When you don't press it, it automatically blocks.

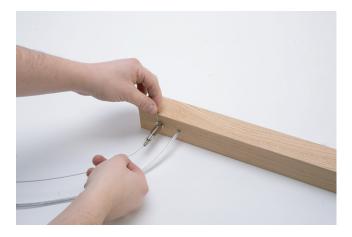

6

5

This is what a correctly connected lamp looks like. Ready for assembly.

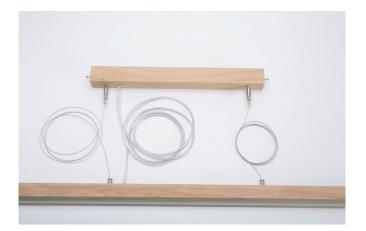

 $^{\prime}$ Insert the power cable through the hole in the aluminum rail.



8

7

[′] Mark the place for drilling holes for screws.



9

Drill two 8mm holes into which you will insert the rawlplug (included in the package).




10 Insert the plastic part into the hole in the wall.




(11)

Screw the aluminum part to the wall.

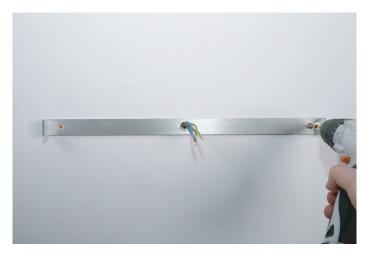




This is what correctly connected cables look like. Brown to brown, blue to blue, yellow-green to yellow-green.

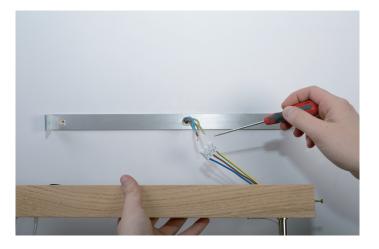



13 Place the wooden part on the aluminum rail.

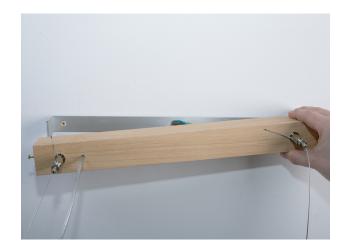

[/] Fix it by screwing in the screws removed at the beginning.

14

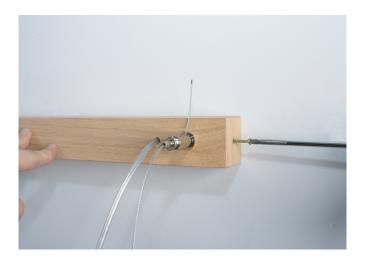





Tip: Mounting the lamp is easy. However, it would be good to have it done by a licensed electrician. It will be easiest with two people working together.

We wish you a lot of joy in using our lamp every day!

